

Flydigi APEX 5

Elite Gaming Controller

User Manual



Scan QR code to read the user manual

Model: APEX 5

 
Specifications

Platform	Mode	System Requirement
PC	Dongle/Cable/BT	Win 7 and above
Switch	Switch	Switch
Android	Flashplay/Native	Android 10 and above
iOS	Native	iOS 14 and above


Native Mode: This mode is suitable for games that natively support controllers.
Flashplay mode: This mode is suitable for mobile games that do not support controllers. It requires the use of the Flydigi Game Hall app as a companion.

Wireless RF: NearLink, BT 5.0
Operating Distance: Less than 10 meters
Battery Information: Rechargeable lithium-ion battery, battery capacity 1500mAh, charging time 3-4 hours, charging voltage 5V, charging current 1000mA
Operating Current: Current less than 90mA during use (default light, excluding motors and force feedback triggers), current less than 0.1mA in standby mode
Temperature Range: Use and store between -10°C and 50°C.


Force Adjustable Joystick Instruction

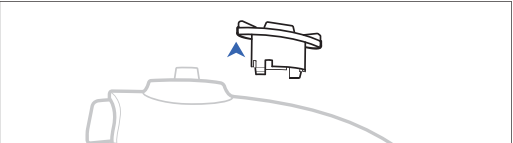

 1 Pry up the D-pad from the "Up" direction to remove it.

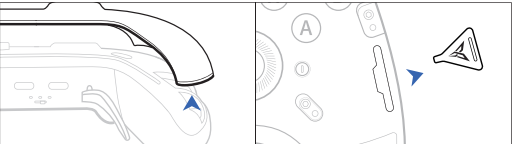

 2 Remove the magnetic cover from the gap of the grip, and take out the force adjustment paddle from the right side of the controller.

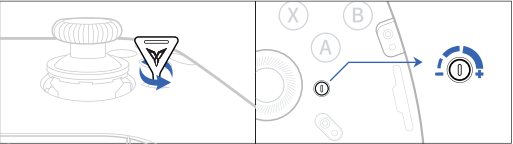

3 Adjust the joystick sensitivity by rotating the screw on the right side of the joystick using the adjustment paddle.

Appearance

Force-adjustable Alloy Joystick

 
Detachable D-pad

Adjustable RGB Lighting Replaceable Light Panels

Adjustable Force Feedback Triggers

Rear Buttons

Rear Button Slot

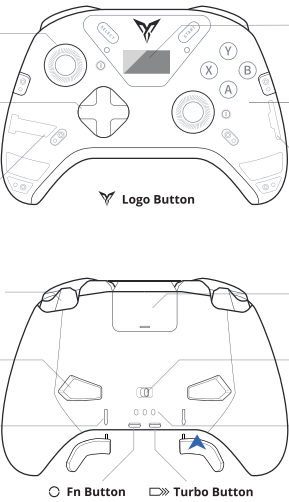

Full-color Interactive Screen

Detachable Top Cover

Force adjustment paddle

Logo Button

Concealed Holder Slot

Power Switch

Charging Contacts

Fn Button

Turbo Button

*Insert or release the back button pin along the indicated direction.

Force Feedback Trigger Instruction

Adaptive Mode

According to the real-time changes in the game scene, the force feedback sensation of the triggers is automatically switched. Please access www.flydigi.com on your computer and download "Flydigi Space Station" to enable adaptive mode.

Custom mode

Mode	Introduction
Regular	Force feedback function disabled, regular linear triggers
Race	Simulate the damping sensation when pressing the throttle
Sniper	Simulate the sensation of pressing the trigger on a sniper rifle
Recoil	Simulate the continuous oscillation of the trigger when firing a machine gun in sustained automatic fire
Vibration	Simultaneously vibrate with the grip to enhance immersion
Trigger lock	Adjust the trigger travel

Open Flydigi Space Station For More Customize Setting

Visit our official website www.flydigi.com to download "Flydigi Space Station". You can customize buttons, macros, motion sensing, joystick and other functions.

Button mapping

Macro definition

Motion sensing mapping

Joystick adjustment

Usage of Turbo button

Functions	Key Combinations
Enable/Disable button rapid fire	⇨ + button to be set

*Turbo button function is off by default and can be enabled in Flydigi Space Station

Hotkeys

Functions	Key Combinations
Wake up the controller	Press the ⚡ button
Enter the screen menu	Press and hold the ⚡ button for 1 second
Re-pair the dongle	Press and hold ○ + ⚡ for 3 seconds
Restore factory settings	Press and hold ○ + 📶 + ⚡ for 3 seconds
Switch controller's preset	○ + A/B/X/Y (corresponding to preset 1/2/3/4)

*The Preset Switching function is off by default and can be enabled in Flydigi Space Station

Connect Your Controller

Pull the reel switch of the controller to ON, then press and hold the ⚡ to open the menu on the screen, where you can configure the controller mode and button settings.



Connect

PC Switch

Android iOS

Re-pairing More

Open the on-screen menu, select [Connect] - [PC], and connect the computer and the controller using a receiver or a cable.

 


Connect to a PC

If the controller is not used for a period of time, it will automatically enter sleep mode. Press the ⚡ to wake up the controller. You can modify the sleep timeout in the Flydigi Space Station.

Connect to a Switch

Adjust the controller to Switch mode, click on the controllers icon on the home page of your Nintendo Switch, and go to [Change Grip/Order]. The controller will automatically pair and connect.

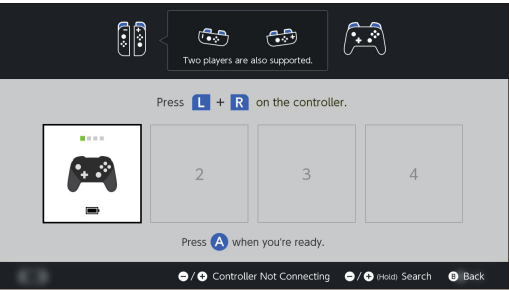

Two players are also supported.

Press L + R on the controller.

Press A when you're ready.

Controller Not Connecting

Search

Back

At Switch mode, the button-to-key mapping is as follows

A	B	X	Y	SELECT	START	⚡	○
B	A	Y	X	-	+	Home	Screenshot

Switch

Connect to an Android/iOS device

1. Scan the QR code to download and install the Flydigi Game Center app.
2. Enter Flydigi Game Center - Peripheral Management and click on "Add Device". Follow the instructions provided in the game hall to connect the controller.



The name and content of harmful substances in the product

Part Name	Toxic or Hazardous Substances and Elements					
	Pb	Hg	Cd	Cr	PBB	PBDE
PCB Board	○	○	○	○	○	○
Shell	○	○	○	○	○	○
Packaging	○	○	○	○	○	○
Wire	○	○	○	○	○	○
Polymer battery	○	○	○	○	○	○
Silicone	○	○	○	○	○	○
Small structural parts such as metal and tape	○	○	○	○	○	○

This form has been prepared in accordance with the provisions of SJ/T 11364

- Indicates that the content of the hazardous substance in all homogeneous materials of this part is within the limit specified in GB/T 26572-2011 Require the following
- ✕ Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the provisions of GB/T 26572-2011 The limited requirements