飞智八爪鱼5_用户手册

20250708_V10

飞智八爪鱼5

力反馈精英手柄

APEX 5 Elite Gaming Controller

用户手册

User Manual

扫码查看完整版用户手册

掃碼查看用戶手冊

Scan QR code to read the user manual

QR코드를 스캔하시면 사용설명서를 보실 수 있습니다

Model: APEX 5

摇杆力调节使用说明

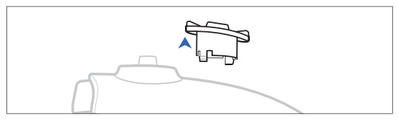

1 从十字键“上”方向撬起键帽，将键帽取出

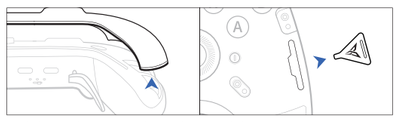

2 沿握把缝隙处取下磁吸外壳，从手柄右侧取出力调节拨片

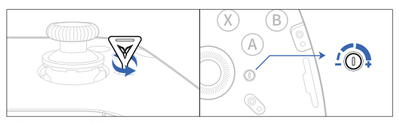

3 通过拨片旋转摇杆右侧的螺丝，调节摇杆力度

力反馈扳机使用说明

自适应模式

根据游戏实时场景变化，自动切换扳机的力反馈手感。
请用电脑访问 www.flydigi.com 下载「飞智空间站」，开启自适应模式。

自定义模式

模式	介绍
常规	无力反馈效果，常规的线性扳机
赛车	仿真踩油门的阻尼感
狙击	仿真枪械段落式扳机手感
机枪	仿真连发射击的高频后坐力
震动	跟随握把同步震动，提升沉浸感
扳机锁	调节扳机的触发行程

飞智空间站 开启更多自定义

访问飞智官网 www.flydigi.com 下载「飞智空间站」，可自定义按键、宏、体感、扳机等功能。

按键映射	宏定义	体感映射	摇杆调节

连接手柄

将手柄背部开关拨到 ON，长按 键打开屏幕菜单，可设置手柄模式、按键配置等功能

连接电脑

打开屏幕菜单，选择【模式切换】-【PC】，通过接收器或数据线连接电脑和手柄

一段时间不使用，手柄将自动休眠，按 键即可唤醒手柄。
可在飞智空间站修改进入休眠的时间。

连接 Switch

将手柄切换到 Switch 模式，点击Switch首页的手柄图标，进入【更改握法/顺序】，手柄将自动配对连接

Switch 模式下按键和键值映射关系如下

A	B	X	Y	SELECT	START			
B	A	Y	X	-	+	主页	截图	Switch

连接安卓/iOS设备

1 扫描二维码，下载安装飞智游戏厅APP
2 进入飞智游戏厅-外设管理，点击添加设备，按照游戏厅内引导进行手柄连接

规格

平台	模式	系统要求
PC	接收器/有线/蓝牙	Win 7 及以上
Switch	Switch	Switch
Android	Flashplay/原生蓝牙	安卓10及以上
iOS	原生蓝牙	iOS14及以上

原生蓝牙模式：适用于绝大多数原生支持手柄的游戏
Flashplay模式：适用于不支持手柄的手机游戏，需配合飞智游戏厅使用

无线射频： 星闪，蓝牙5.0
使用距离： 小于10米
电池信息： 可充电锂离子电池,电池容量1500mAh,充电时间3~4小时,充电电压5V,充电电流1000mA
工作电流： 使用时电流小于90mA（默认灯效，不含马达和力反馈扳机），待机时电流小于0.1mA
温度范围： -10°C~50°C下使用和存放

外观

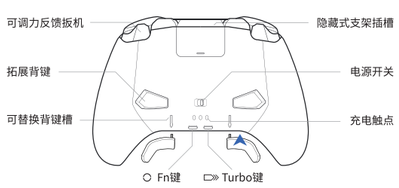

*将背键定位柱沿图示方向插入/推出背键槽位即可。

使用Turbo键快捷设置连发

功能	模式
开启/关闭按键连发	+ 要设置的按键

*Turbo键功能默认关闭，可在飞智空间站内开启

快捷键

功能	操作
唤醒手柄	按下 键
唤起屏幕菜单	长按 键1秒
重置接收器配对	长按 + 3秒
恢复出厂设置	长按 + + 3秒
快捷切换配置	+ A/B/X/Y (对应配置1/2/3/4)

*快捷切换配置功能默认关闭，可在飞智空间站内开启

常见问题

Q：扳机/摇杆数据异常？
A：可以联系官方客服，获取手柄校准方法

Q：手柄蓝牙无法连接？
A：在屏幕菜单-模式切换中，点击重新配对，此时手柄显示配对中，打开设备蓝牙重新连接

Q：接收器连接信号不稳定（延迟/断连等）
A：如果周围存在较多的2.4GHz信号，可能会产生干扰，建议在接收器和电脑之间增加一根USB延长线，起到增强信号的作用

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印刷电路板组件	○	○	○	○	○	○
外壳	○	○	○	○	○	○
包装	○	○	○	○	○	○
线材	○	○	○	○	○	○
聚合物电池	○	○	○	○	○	○
硅胶	○	○	○	○	○	○
金属、胶带等小结构件	○	○	○	○	○	○

本表格依据 SJ/T 11364 的规定编制

○ 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572-2011 规定的限量要求以下

× 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572-2011 规定的限量要求

Flydigi APEX 5
Elite Gaming Controller

User Manual

Scan QR code to read the user manual

Model: APEX 5

Force Adjustable Joystick Instruction

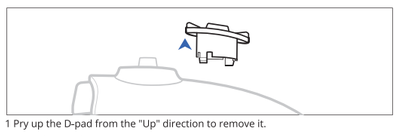

1 Pry up the D-pad from the "Up" direction to remove it.

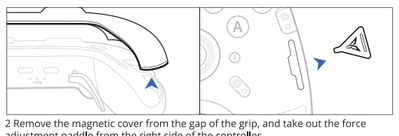

2 Remove the magnetic cover from the gap of the grip, and take out the force adjustment paddle from the right side of the controller.

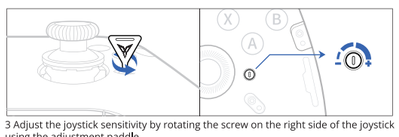

3 Adjust the joystick sensitivity by rotating the screw on the right side of the joystick using the adjustment paddle.

Force Feedback Trigger Instruction

Adaptive Mode

According to the real-time changes in the game scene, the force feedback sensation of the triggers is automatically switched. Please access www.flydigi.com on your computer and download "Flydigi Space Station" to enable adaptive mode.

Custom mode

Mode	Introduction
Regular	Force feedback function disabled, regular linear triggers
Race	Simulate the damping sensation when pressing the throttle
Sniper	Simulate the sensation of pressing the trigger on a sniper rifle
Recoil	Simulate the continuous oscillation of the trigger when firing a machine gun in sustained automatic fire
Vibration	Simultaneously vibrate with the grip to enhance immersion
Trigger lock	Adjust the trigger travel

Open Flydigi Space Station For More Customize Setting

Visit our official website www.flydigi.com to download "Flydigi Space Station". You can customize buttons, macros, motion sensing, joystick and other functions.

Button mapping	Macro definition	Motion sensing mapping	Joystick adjustment

Connect Your Controller

Pull the reel switch of the controller to ON, then press and hold the to open the menu on the screen, where you can configure the controller mode and button settings.

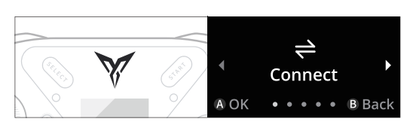

Connect to a PC

Open the on-screen menu, select [Connect] - [PC], and connect the computer and the controller using a receiver or a cable.

If the controller is not used for a period of time, it will automatically enter sleep mode. Press the to wake up the controller. You can modify the sleep timeout in the Flydigi Space Station.

Connect to a Switch

Adjust the controller to Switch mode, click on the controllers icon on the home page of your Nintendo Switch, and go to [Change Grip/Order]. The controller will automatically pair and connect.

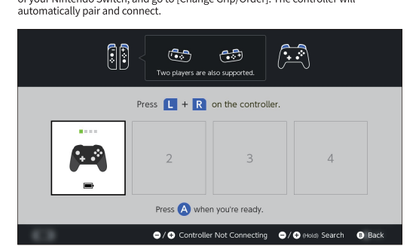

At Switch mode, the button-to-key mapping is as follows

A	B	X	Y	SELECT	START			
B	A	Y	X	-	+	Home	Screenshot	Switch

Connect to an Android/iOS device

1. Scan the QR code to download and install the Flydigi Game Center app.
2. Enter Flydigi Game Center - Peripheral Management and click on "Add Device". Follow the instructions provided in the game hall to connect the controller.

Specifications

Platform	Mode	System Requirement
PC	Dongle/Cable/BT	Win 7 and above
Switch	Switch	Switch
Android	Flashplay/Native	Android 10 and above
iOS	Native	iOS 14 and above

Native Mode: This mode is suitable for games that natively support controllers.
Flashplay mode: This mode is suitable for mobile games that do not support controllers. It requires the use of the Flydigi Game Hall app as a companion.

Wireless RF: NearLink, BT 5.0
Operating Distance: Less than 10 meters
Battery Information: Rechargeable lithium-ion battery, battery capacity 1500mAh, charging time 3–4 hours, charging voltage 5V, charging current 1000mA
Operating Current: Current less than 90mA during use (default light, excluding motors and force feedback triggers), current less than 0.1mA in standby mode
Temperature Range: Use and store between -10°C and 50°C.

Appearance

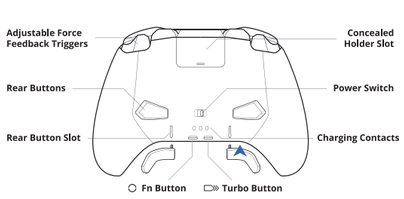

***Insert or release the back button pin along the indicated direction.**

Usage of Turbo button

Functions	Key Combinations
Enable/Disable button rapid fire	+ button to be set

*Turbo button function is off by default and can be enabled in Flydigi Space Station

Hotkeys

Functions	Key Combinations
Wake up the controller	Press the button
Enter the screen menu	Press and hold the button for 1 second
Re-pair the dongle	Press and hold + for 3 seconds
Restore factory settings	Press and hold + + for 3 seconds
Switch controller's preset	+ A/B/X/Y (corresponding to preset 1/2/3/4)

*The Preset Switching function is off by default and can be enabled in Flydigi Space Station

FAQ

Q: Are the trigger/joystick data abnormal?
A: You can contact official customer service to get the controller calibration method.

Q: The controller BT cannot connect?
A: In the screen menu - Connect, click Re-pairing. The controller will display "Pairing" at this time. Open the device's BT settings and reconnect.

Q: Dongle connection signal is unstable. (delay/disconnect etc)
A: If there are many 2.4GHz signals in the vicinity, it may cause interference. It is recommended to use a USB extension cable between the dongle and the computer to enhance the signal.

The name and content of harmful substances in the product

Part Name	Toxic or Hazardous Substances and Elements					
	Pb	Hg	Cd	Cr	PBB	PBDE
PCB Board	○	○	○	○	○	○
Shell	○	○	○	○	○	○
Packaging	○	○	○	○	○	○
Wire	○	○	○	○	○	○
Polymer battery	○	○	○	○	○	○
Silicone	○	○	○	○	○	○
Small structural parts such as metal and tape	○	○	○	○	○	○

This form has been prepared in accordance with the provisions of SJ/T 11364

○ Indicates that the content of the hazardous substance in all homogeneous materials of this part is within the limit specified in GB/T 26572-2011 Require the following

× Indicates that the content of the hazardous substance in at least one homogeneous material of the component exceeds the provisions of GB/T 26572-2011 The limited requirements

PANTONE 2195C

70g双胶纸双面打印